

# CLICKER® Models KLIK2U & KLIK2C

## Program to Genie® IntelliCode® 2

### BEFORE STARTING:


*You MUST have a Genie® IntelliCode® 2 remote control with at least one button already programmed to the opener.*

### SETUP THE CLICKER® KEYPAD:

- 1** Select and write a 4 digit PIN:



- 2** Press the **[\*]** and **[#]** keys together until keypad stops flashing.

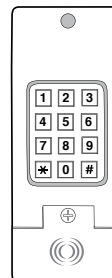

- 3** Enter PIN from step 1 and press **[#]**.




- 4** Press **[5]**.


- 5** Press **[#]**.

### PROGRAM TO THE GENIE® INTELLICODE® 2 GARAGE DOOR OPENER:


- 6** On the garage door opener, press and hold the Program/Set button until both the long and short LED light up BLUE.

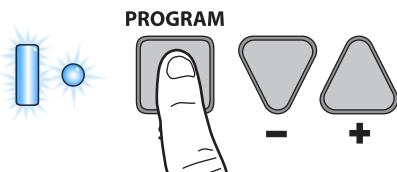


- 7** Release the Program/Set button and only the round LED will be lit in BLUE.

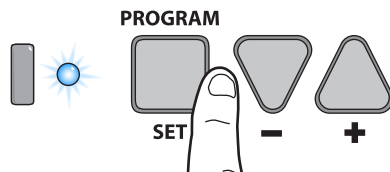


- 8** Press and release the Program/Set button and the long LED will flash PURPLE.

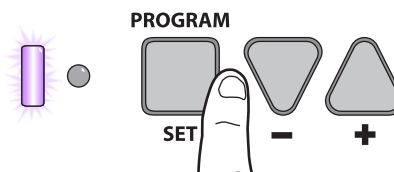


- 9** On *the Genie® remote control*, press and release the button that is already programmed to the garage door opener. Both LED's will flash PURPLE.

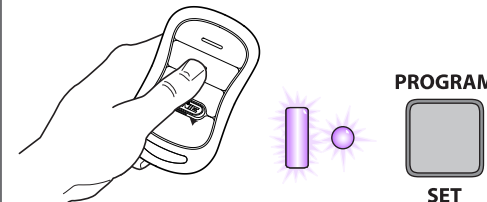


- 10** On *the CLICKER® keypad*, enter the 4 digit pin you programmed in the previous section and press and release the **[0]** key. Both LED's on the garage door opener will light up PURPLE.

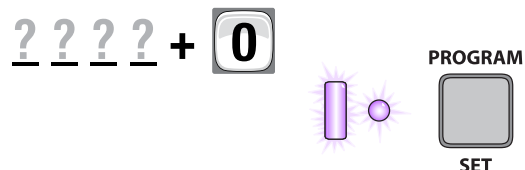

- 11** On *the CLICKER® keypad*, press and release **[0]** again. Both LED's on the garage door opener will light up BLUE.

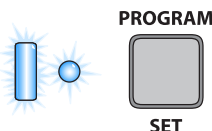

- 12** On *the CLICKER® keypad*, press and release **[0]** again. This will activate the garage door opener and programming is complete.

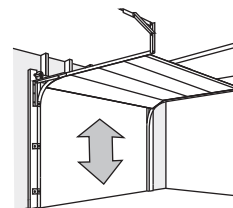

If the door does not activate, repeat programming.

- 13** To test, wait 30 seconds, then enter your 4 digit pin followed by **[0]**.



For normal operation, always follow your 4 digit pin with **[0]** to activate the door.

Genie and IntelliCode are trademarks of GMI Holdings, Inc.