 


Shields

ATTIC INSULATION SHIELD

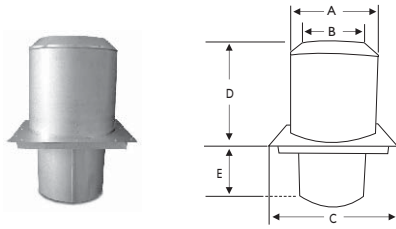

- Must be installed where the chimney passes from a lower living space into an upper living space or attic space.
- Also used as a second shield at intermediate floor in two story system.

Size	Dimensions					Product Code	Pack
	A	B	C	D	E		
6"	12"	8"	14"	11-13/16"	8-1/2"	JM6AIS	1
7"	13"	9"	15"	11-13/16"	8-1/2"	JM7AIS	1
8"	14"	10"	16"	11-13/16"	8-1/2"	JM8AIS	1


RAFTER RADIATION SHIELD



- Must be installed where the chimney is enclosed immediately below the roof line.

Size	Dimensions		Product Code	Pack
	A	B		
6"	12"	12"	JM6RRS	1
7"	13"	12"	JM7RRS	1
8"	14"	12"	JM8RRS	1

 WALL THIMBLE

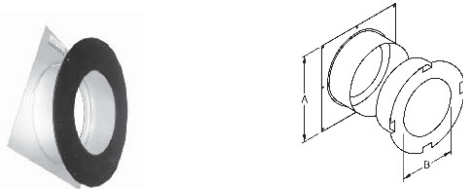


- Used in a wall support installation.
- Maintains 2" air space clearance.
- Prevents insulation and other building materials from contacting the horizontal chimney length.

Size	Dimensions		Product Code	Pack
	A	B		
6"	10-1/8"	17"	JM6WT	1
7"	11-1/8"	17"	JM7WT	1
8"	12-1/8"	17"	JM8WT	1

Flashings and Storm Collars

 ROOF FLASHING SELECTION CHART




In this example, the pitch is 3/12.
 0/12 - 6/12 Roof Pitch = JM*AAF
 6/12 - 12/12 Roof Pitch = JM*AF2

To determine what roof flashing you'll require, you must work out the pitch of your roof. To determine the pitch, you'll need two rulers and a level. Measure the number of inches from the end of the ruler down to the roof.

All Roof Flashings:

- Come complete with storm collar.
- Seams are sealed with silicone.
- Galvalume construction.

 
TALL CONE FLASHING - FLAT to 1/12

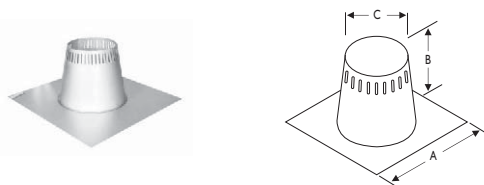

- For flat roofs.

Size	Dimensions			Product Code	Pack
	A	B	C		
6"	24"	12"	10"	JM6ATC	1
7"	24"	12"	11"	JM7ATC	1
8"	27-1/2"	12"	12"	JM8ATC	1

 ROOF FLASHING - FLAT to 6/12

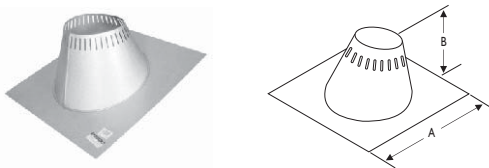

- For a low sloped roof with a pitch of 0/12 to 6/12.

Size	Dimensions		Product Code	Pack
	A	B		
6"	27-1/2"	9"	JM6AAF	1
7"	27-1/2"	9"	JM7AAF	1
8"	27-1/2"	9"	JM8AAF	1
6"	27-1/2"	9"	JM6AAF-3	3
7"	27-1/2"	9"	JM7AAF-3	3
8"	27-1/2"	9"	JM8AAF-3	3